





WELCOME GUIDE

PowerJet 130 | OPB-727SQ |

Please read this Guide carefully before using the product

*For safety issues, the product remains at low capacity during shipping.
Please fully charge the product before initial use.

Product Overview



Type-C1 (C1 IN/OUT)

Type-C2 (C2 OUT)

USB-A (A OUT)

● Single-Port Output

A: 24W C1: 100W C2: 30W

● Dual-Port Output

C1+C2 130W


C1+A 124W

C2+A 30W

● Triple-Port Output

C1+C2+A 130W

LED Display

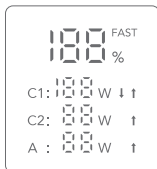

(FAST) Fast-Charging Mode Activated

(%) Remaining Battery

(↑) The power bank is charging your device

(↓) The power bank is being recharged

(W) Watt, Real-time Input/Output Power

(C1) Type-C1 Input & Output Port


(C2) Type-C2 Output Port

(A) USB-A Output Port

Using Instructions

Charge Your Device


Charge your device through 2 Type-C output ports or the USB-A output port. The power bank supports up to 3 devices fast charge simultaneously.

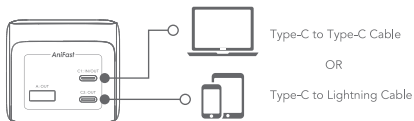

*The power bank intelligently switches to smart fast-charging mode once it matches your device's charging protocol. It is compatible with the majority of devices such as Apple, Samsung, TECNO, Infinix, HP, DELL, and Lenovo, among others.


Activate Low-current Mode

Press the Power Button twice to activate the low-current mode, and plug in the USB-A port to charge your smartwatch, earphones, and headset.

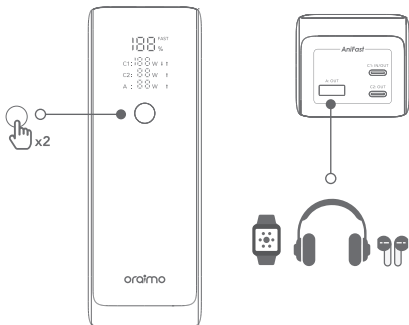


Pause Charging

Long press the Power Button for 3 seconds to pause charging.

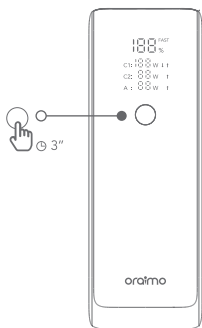



Recharge the Power Bank

Recharge your power bank through input 1(Type-C1) using the Type-C to Type-C charging cable attached to the package.

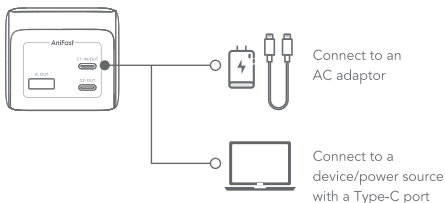

*If recharged by a laptop, activate the reverse charging function of the laptop first.

نظرة عامة على المنتج

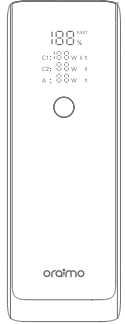

● إخراج بمنفذ فردي

24: واط C1 : 100 واط C2 : 30 واط

● إخراج بمنفذ ثنائي

130 واط C1+C2

124 واط C1+A

30 واط C2+A

● إخراج بمنفذ ثلاثي

130 واط C1+C2+A

شاشة عرض LED


- تم تنشيط وضع الشحن السريع (FAST)
- البطارية المتبقية (%)
- بنك الطاقة يشحن جهازك (↑)
- تتم إعادة شحن بنك الطاقة (↓)
- واط، طاقة الإدخال/الإخراج في الوقت الفعلي (W)
- منفذ إدخال وإخراج Type-C1 (C1)
- منفذ إخراج Type-C2 (C2)
- منفذ إخراج USB-A (A)



تعليمات الاستخدام

اشحن جهازك

اشحن جهازك عبر 2 منفذ إخراج Type-C أو منفذ إخراج USB-A. يدعم بنك الطاقة الشحن السريع لما يصل إلى 3 أجهزة في وقت واحد.



كابل Type-C إلى Type-C



أو

Type-C إلى كابل الشحن السريع

* يقوم بنك الطاقة بالتحويل بذكاء إلى وضع الشحن السريع الذكي بمجرد مطابقته لبروتوكول الشحن الخاص بجهازك. وهو متوافق مع غالبية الأجهزة مثل Apple و Samsung و TECNO و Infinix و HP و DELL و Lenovo وغيرها.


تنشيط وضع التيار المنخفض

اضغط على زر الطاقة مرتين لتنشيط وضع التيار المنخفض، وقم بتوصيل منفذ USB-A لشحن ساعتك الذكية وسماعات الأذن وسماعات الرأس.

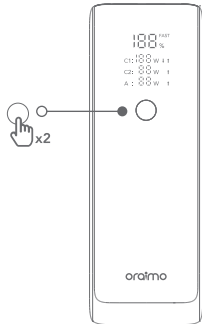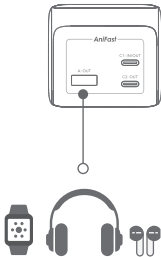


إيقاف الشحن مؤقتًا

ضغطة مطولة على زر الطاقة لمدة 3 ثوانٍ لإيقاف الشحن مؤقتًا.

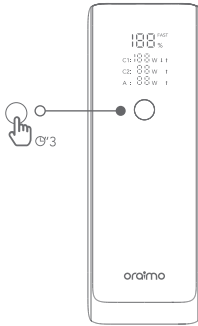

إعادة شحن بنك الطاقة

أعد شحن بنك الطاقة الخاص بك من خلال الإدخال 1 (Type-C1) باستخدام كابل الشحن Type-C إلى Type-C المرفق بالعبوة.

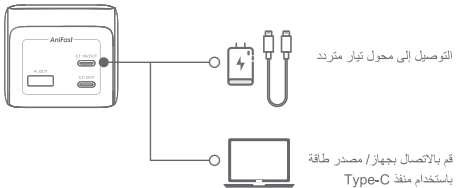

*في حالة إعادة الشحن بواسطة كمبيوتر محمول، قم بتنشيط وظيفة الشحن العكسي للكمبيوتر المحمول أولاً.



www.oraimo.com



 [oraimo accessories](#)